


DALI SC/SC-A

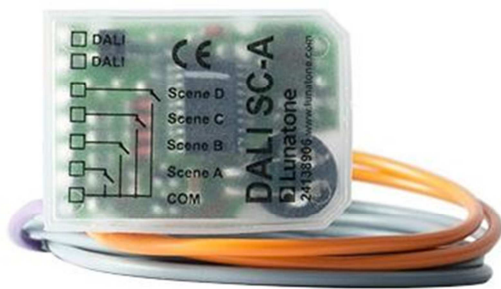

Datasheet Scene Control Module

Module to recall four DALI scenes by
using conventional momentary
switches

Art. Nr. 24138906 (SC-A)

Art. Nr. 24034263 (SC)

subject to change, information provided without guarantee


DALI SC/SC-A Scene Control Module

Overview

- Compact control module to recall lighting scenes from DALI ballasts.
- To assign a momentary switch to a specific scene the scene range has to be selected via the rotary switch on the back of the module.
- Conventional momentary switches can be used for scene selection.
- The DALI SC offers the possibility to program light scenes whereas the DALI SC-A does not support this feature.
- Multiple DALI SC modules can be used on the same DALI-line.
- The module can be inserted into the mounting box of the momentary switch.
- The DALI SC must NOT be connected to the mains. It is supplied directly via the DALI signal line.
- The momentary switches are connected directly to the DALI SC (potential free contacts) and must not be connected to the mains.

Specification, Characteristics

type	DALI-SC	DALI SC-A
article number	24034263	24138906
supply	via DALI signal line	
current consumption	6 mA	
input	4 momentary switches	
output	DALI (broadcast)	
scenes	4 out of 16	
scene selection	rotary switch	
scene programming	Yes	No
storing temperature	-25°C ... +75°C	
operational ambient temperature	-25°C ... +75°C	
protection class	IP20	
connecting wire cross section	0.75 mm ²	
wiring length	250 mm	

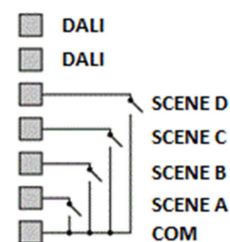

connection plan

DALI SC only:
Programming Scenes



Pressing any of the switch inputs for more than 10 seconds -> Beep, keep the button pressed for a further second, the actual light levels will be stored to the selected scene (dependent on rotary switch and pressed button), The module will confirm this action with 2 beeps.

rotary switch	scene A	scene B	scene C	scene D
1	1	2	3	4
2	2	3	4	5
3 ... 9	3 ... 9	4 ... 10	5 ... 11	6 ... 12
A	10	11	12	13
B	11	12	13	14
C	12	13	14	15
D	13	14	15	16
E	14	15	16	1
F	15	16	1	2
0	16	1	2	3

Additional Information and Equipment

DALI-Cockpit – free configuration tool from
Lunatone for DALI systems

<http://lunatone.at/en/dali-systems/software/>

DALI-Manual [http://www.dali-
ag.org/c/manual_gb.pdf](http://www.dali-ag.org/c/manual_gb.pdf)

DALI USB – PC interface for DALI system. The
DALI-Cockpit can access DALI components
using the DALI USB

[http://lunatone.at/en/downloads/Lunatone
Art24138923 DALI USB Datasheet EN.pdf](http://lunatone.at/en/downloads/Lunatone_Art24138923_DALI_USB_Datasheet_EN.pdf)

DALI PS – power supply for a DALI line

[http://lunatone.at/en/downloads/Lunatone
Art24033444 DALI PS Datasheet EN.pdf](http://lunatone.at/en/downloads/Lunatone_Art24033444_DALI_PS_Datasheet_EN.pdf)

Contact

Technical Support: support@lunatone.com

Requests: sales@lunatone.com

www.lunatone.com

